

# STAR Trigger BC1 Crate Layout

## run 22

front:

	DSM EE009 (0x1E)	DSM EE008 (0x1E)	DSM EE007 (0x1D)	DSM EE006 (0x1C)	DSM EE005 (0x1B)	DSM EE004 (0x1A)	DSM EE003 (0x19)	DSM EE002 (0x18)	DSM EE001 (0x17)	DSM EE102 (0x16)	DSM EE101 (0x15)	DSM BC106 (0x14)	DSM BC105 (0x13)	DSM BC104 (0x12)	DSM BC103 (0x11)	DSM BC102 (0x10)	DSM BC101 (0x21)	STP2C (stp2c-bc1.scaler.bn1.local)	RCC2 (0x25)		
	5A	6B	6A	1B	1A	7B	7A	2B	2A	8B	8A	3B	3A	9B	9A	4B	4A	RCF2:			

back:

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
		RCC2		DSMI	DSMI	DSMI	DSMI	DSMI	DSMI	DSMI	DSMI	TDSMI	TDSMI	TDSMI	TDSMI	TDSMI	TDSMI	TDSMI	TDSMI	TDSMI

south platform rack 1A7-2