



SW1 - selects where the board receives the RHIC strobe. Switch set away from front panel selects RS from TCD cable. Switch set toward front panel selects RS from local oscillator (U43).

SIZE	REV	DRAWING #
A		

DWN BY	Leo Greiner	DATE	9/29/99	SCALE	UC Berkeley - Space Sciences Laboratory Crawford Group
				DO NOT SCALE DRAWING	
COG. ENG.	Leo Greiner	DATE		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE INCHES DECIMAL TOLERANCES	TITLE
ALL SCREW THREADS PER ANSI 14.6 BREAK EDGES 0.020 MAX ON MACHINE WORK. REMOVE BURRS, LOOSE SCALE AND WELD SPLATTER REFERENCE - ANSI 14.5 & B46.1				.X = ±0.06 .XX = ±0.02 .XXX = ±0.004 ANGULAR TOLERANCE ± 1 DEG.	DSMI Hardware switch settings