



SW1 - selects where the board receives the RHIC strobe. Switch set down selects RS from RCC cable. Switch set up selects RS from local oscillator (U1).

SIZE A	REV	DRAWING #
-----------	-----	-----------

DWN BY Eleanor G. Judd	DATE 12/15/03	SCALE DO NOT SCALE DRAWING	UC Berkeley - Space Sciences Laboratory Crawford Group
COG. ENG. Eleanor G. Judd	DATE	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE INCHES DECIMAL TOLERANCES .X = ±0.06 .XX = ±0.02 .XXX = ±0.004	
ALL SCREW THREADS PER ANSI 14.6 BREAK EDGES 0.020 MAX ON MACHINE WORK. REMOVE BURRS, LOOSE SCALE AND WELD SPLATTER REFERENCE - ANSI 14.5 & B46.1		ANGULAR TOLERANCE ± 1 DEG.	