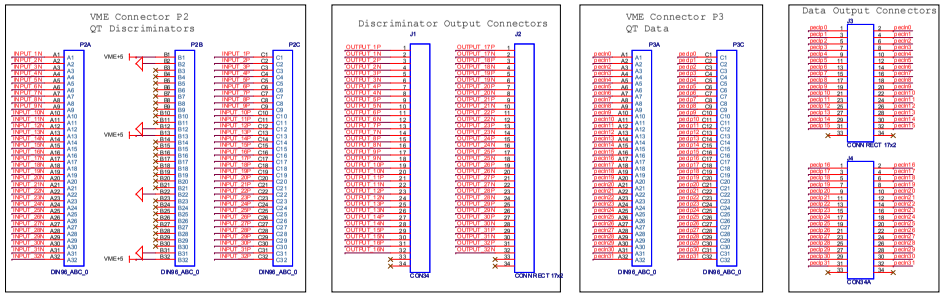







Note: U2, U3, U4,U5, &U6 have been "mirrored horizontally" so in layout when they are put "opposite" or on the bottom , the nets return to their original position

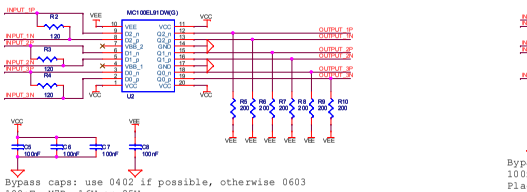

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

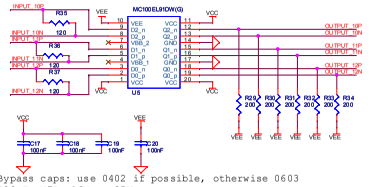

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

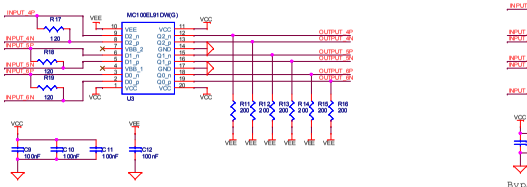

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

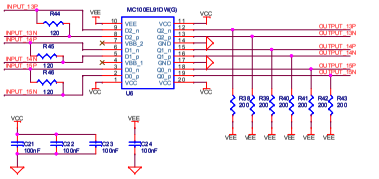

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

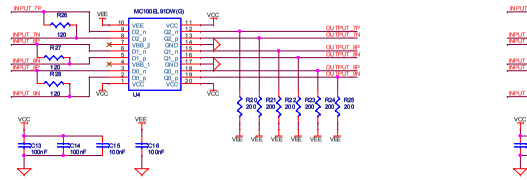

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

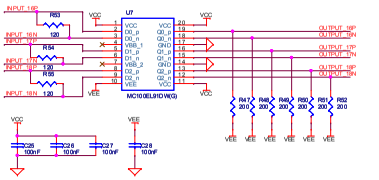

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

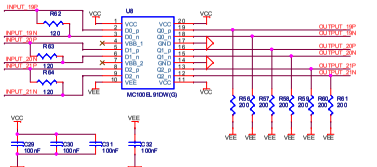

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

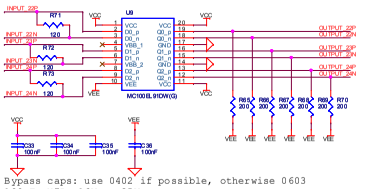

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

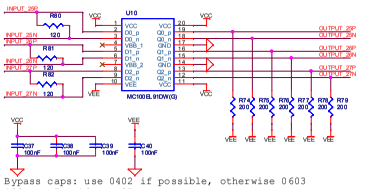

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

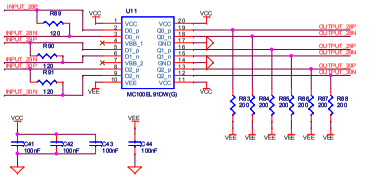

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!

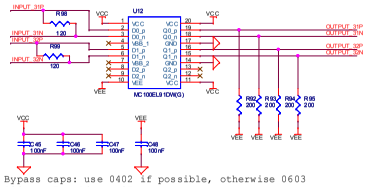

Bypass caps: use 0402 if possible, otherwise 0603
100nF X7R 16V or 25V
Place on same side of board as chips!



Chris Perkins UC Berkeley / SSL

File: TAC Adapter

Size: D | Document Number: <Doc> | Rev: 1

Date: Tuesday, December 18, 2007 | Sheet 1 of 1